 
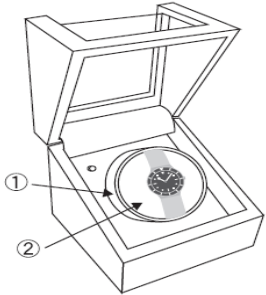 


Thank you for your purchase of IG-ZERO series watch winders. please read this instruction manual carefully to use this product properly.

Precaution For Use

- 1、 Please hold the rotating cup while removing the watch.
- 2、 Please do not rotate the rotating cup manually. it may cause the damage.
- 3、 Motor noise varies between individuals and is not subject for return or repair unless in extreme cases.
- 4、 Please be careful moving the winder while the watch is still fitted.
- 5、 The watch may not be wound up depending on mechanism and performance of the watch.
- 6、 Please remove AC adapter from the winder when not in use for long period of time.
- 7、 Regular maintenance:
 - *please use lint-free cloth to clean the winder.
 - *please do not use benzene, paint thinner, polishing agent or any detergents for cleaning.
- 8、 Please do not use the winder in environment such as:
 - *Temperature below 0°C or above 40°C
 - *Unleveled surface
 - *in high humidity
 - *place with strong magnetic

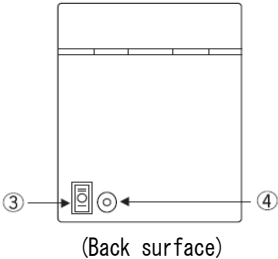

Instruction

- 1、 Please open the top lid and remove the cushion (fig. 2) to fit your watch on the cushion. We advise you to wind the watch a little by turning the crown prior to placing the watch on rotating cup for smoother winding. Please place the cushion inside the rotating cup (fig. 1) in parallel with the angle of the rotating cup. The winder may not wind your watch properly if placed in parallel with the ground.
- 2、 Please do not place anything other watch to avoid the damage.
- 3、 The winder starts rotating when the switch (fig. 3) is on.
 - (-) Rotate clockwise for 10 minutes then stop for 3 hours and repeat. LED light (blue) is on all the time.
 - (=) Rotate counter-clockwise for 10 minutes then stop for 3 hours and repeat. LED light (blue) is on all the time.
 - (0) stop LED light (blue) is off.Some models with large case may touch the lid while rotating. in this case, please leave the lid open.
- 4、 Please use AC adapter included by connecting to fig. 4

